
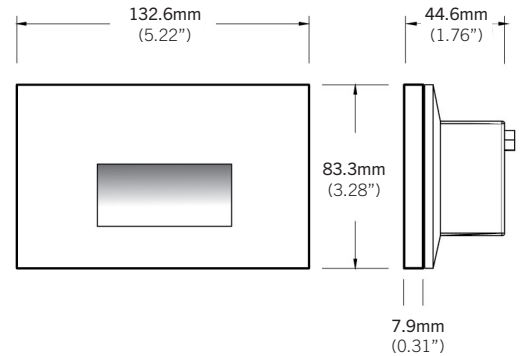


## INSTALLATION GUIDE

### DIMENSIONS

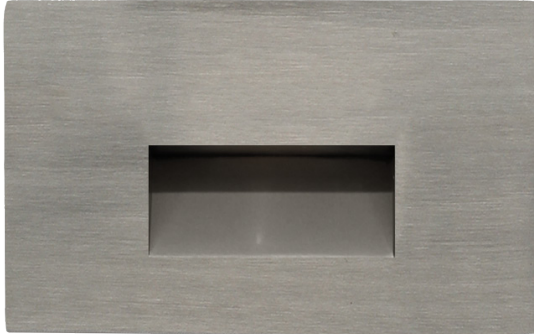

### PRE-INSTALLATION

Power input of 120V AC, 50/60Hz is required.  
Confirm the source voltage is compatible.

\* For 12V AC/DC, please follow standard low voltage wiring.

Disconnect power source prior to installation.

### SAFETY

Read all instructions before installation.

**Do not** take apart LED light engine! This fixture has no serviceable parts.

**Do not** look directly into light.



Product should be installed in accordance with these instructions, current electrical codes, current National Electric Code (NEC), and/or Canadian Electrical Code standards.



If you have any doubts about how to install this lighting fixture, or if the fixture fails to operate completely, consult a local licensed electrician.

### INSTALLATION

#### STEP 1

Connect the LED supply wires to the source wires fed through the electrical box. Match the polarity (Black to Black/ White to White).

#### STEP 2

Align the holes of the LED light engine and electrical box. Using the provided screws, tightly secure them together.

#### STEP 3

Cover the LED light engine with the faceplate. Using the provided wrench, tighten the screw at the bottom of the faceplate.

#### STEP 4

Turn on main power.

