


INSTALLATION GUIDE

DIMENSIONS

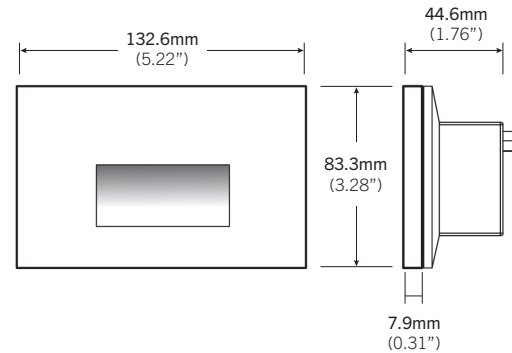

PRE-INSTALLATION

Power input of 120V AC, 50/60Hz is required.
Confirm the source voltage is compatible.

**For 12V AC/DC, please follow standard low voltage wiring.*

Disconnect power source prior to installation.

SAFETY

Read all instructions before installation.

Do not look directly into light.

Do not submerge in water.

-  Product should be installed by a qualified electrician.
-  Product should be installed in accordance with these instructions and current electrical codes.
-  Not recommended to be installed on the beach and corrosive chemical areas to avoid corrosion and damage.
-  Must be installed with CORE Lighting Drivers

INSTALLATION

STEP 1

Connect the LED supply wires to the source wires fed through the electrical box. Match the polarity (Black to Black/ White to White).

STEP 2

Align the holes of the LED light engine and electrical box. Using the provided screws, tightly secure them together. (Figure 1)

STEP 3

Cover the LED light engine with the faceplate. Using the provided wrench, tighten the screw at the bottom of the faceplate.

STEP 4

Turn on main power.

Figure 1

